

NAME AND DRAWING	FUNCTION	FAILURE MODE AND CAUSE	MISSION PHASE	FAILURE EFFECT ON			FAILURE DETECTION INTEGRITY GROUP	CORRECTIVE ACTION TIME AVAILABLE TIME REQUIRED	CRIT. H/F	HAZARD/SUMMARY
				ENDITEM	MISSION	CREW/VEHICLE				
		P.3.1 Mode: Bridge assembly separation current fail Cause: ▪ Defective material	Ballout	Parachute remains attached upon water entry if second cutter fails	N/A*	Possible loss of life if second cutter fails	Vision	Cut suspension lines with knife Release seconds	3/18	
0.0 PARACHUTE BEACON URG133 NSN-5825-01-095- 64845	Transmits location during descent	0.1.1 Mode: Fails to transmit Cause: ▪ Circuit failure ▪ Deployed batteries ▪ Defective material	Descent	Unable to transmit location of crewmember	N/A*	Possible delay in crewmembers' rescue if PRC 90 or other survival equipment fails	None	None	3/18	