

MSG 182 - BLUE FD13 STARNAV DEBUG IFM

SHARED PGSC POWER UP

- 1
- 2
- 3 Shared PGSC 1. Relocate Shared PGSC
- 4
- 5 Aft Overhead 2. Relocate PCMCIA Ethernet Card/Ethernet Cable connected to Aft
- 6 Patch Panel Cable
- 7
- 8 Shared PGSC 3. Insert PCMCIA card into open slot on Shared PGSC
- 9
- 10 DC Adapt 4. DC PWR SPLY SW1 sw – ON (It on)
- 11 Shared PGSC PGSC pwr sw – on (mom)
- 12
- 13 * If date and time prompts appear, press [ENTER] *
- 14

NOTE

In the following step a spare disk is needed. ZCG has a spare disk that will be used in this procedure. There are a total of three ZCG disks. Use one of the two ZCG disks that is NOT labeled 107ZCG1.0b Program PGSC disk.

- 21
- 22 SC04A 5. Unstow one ZCG Floppy Disk from ZCG-1 STOWAGE
- 23 Ensure Floppy Disk is NOT labeled 107ZCG1.0b Program PGSC disk
- 24 Insert Floppy Disk into PGSC external disk drive
- 25
- 26 6. √MCC (STARNAV powered)
- 27
- 28 Shared PGSC 7. Select 'Start' / 'Run'
- 29 Type "telnet", select 'OK'
- 30 Select 'Terminal' / 'Start Logging'
- 31 From the 'Look In' pulldown list, select C: drive
- 32 From the folder list, select 'temp' folder
- 33 In the filename box, type "starnav.log"
- 34 Select 'Connect'
- 35 Select 'Remote System'
- 36 Enter Host Name "192.168.1.27"
- 37 √ Port – 'telnet'
- 38 √ TermType – 'vt100'
- 39 Select 'Connect'
- 40

STARNAV DEBUG

NOTE

Commands to be entered on the PGSC are shown below in bold and in quotes, for example "**ps**". The quotes are not to be entered as part of the value.

NOTE

Upon connection, a login prompt will appear asking to input user name and password

- 51
- 52 8. Type login as "**root**" and press enter
- 53
- 54
- 55
- 56

MSG 182 - BLUE FD13 STARNAV DEBUG IFM

- 1 Shared PGSC 9. Type password as "starnav" and press enter
- 2
- 3 10. √Login successful and command prompt appears as "#"
- 4
- 5 **NOTE**
- 6 Once the command prompt appears then perform the
- 7 following operations. To perform the next operation, wait
- 8 for the command prompt to reappear. It may take a while
- 9 for the command prompt to reappear for some steps.
- 10
- 11 11. Type "**ps**" and press Enter
- 12
- 13 12. Type "**slay mainnew**" and press Enter
- 14
- 15 13. Type "**slay measure**" and press Enter
- 16
- 17 14. Type "**ps**" and press Enter
- 18
- 19 15. Type "**dcheck /**" and press Enter
- 20 Wait for the utility to finish and return to command prompt
- 21
- 22 16. Type "**df /**" and press Enter
- 23
- 24 17. Type "**netmap**" and press Enter
- 25
- 26 18. Type "**netinfo -l**" and press Enter
- 27
- 28 19. Type "**ping localhost**" and press Enter
- 29
- 30 20. Type "**netstat -i**" and press Enter
- 31
- 32 21. Type "**ping 192.168.1.3**" and press Enter
- 33
- 34 22. Type "**netstat -i**" and press Enter
- 35
- 36 23. Type "**ls -l**" and press Enter
- 37
- 38 24. Type "**cd starnav**" and press Enter
- 39
- 40 25. Type "**ls -l**" and press Enter
- 41
- 42 26. Type "**ls -l images**" and press Enter
- 43
- 44 27. Type "**ps**" and press Enter
- 45
- 46 28. Type "**cat uplink.txt**" and press Enter
- 47
- 48 29. Type "**cat code.log**" and press Enter
- 49
- 50 30. Type "**cat downlink.txt**" and press Enter
- 51
- 52 31. Type "**./upload 1 &**" and press Enter
- 53
- 54 32. √MCC (STARNAV-EDSMU connection)
- 55

MSG 182 - BLUE FD13 STARNAV DEBUG IFM

- 1 Shared PGSC 33. If MCC confirms STARNAV-EDSMU connection:
 - 2 Type "**slay upload**" and press Enter
 - 3 Go to step 37
- 4 If no Starnav-EDSMU connection:
 - 5 Wait for 1 minute
 - 6 If PGSC displays error messages "Network Failure: Connection not established...", press Enter for new prompt and continue
- 7
- 8
- 9 34. Type "**slay upload**" and press Enter
- 10
- 11 35. Type "**netstat -i**" and press Enter
- 12
- 13 36. Type "**./download_text 1 &**" and press Enter
- 14
- 15 37. √MCC (STARNAV-EDSMU connection)
- 16
- 17 38. If MCC confirms STARNAV-EDSMU connection:
 - 18 Type "**slay download_text**" and press Enter
 - 19 Go to step 42
- 20 If no Starnav-EDSMU connection:
 - 21 Wait for 1 minute
 - 22 If PGSC displays error messages "Network Failure: Connection not established...", press Enter for new prompt and continue
- 23
- 24
- 25 39. Type "**slay download_text**" and press Enter
- 26
- 27 40. Type "**netstat -i**" and press Enter
- 28
- 29 41. Type "**./download_image 1 &**" and press Enter
- 30
- 31 42. √MCC (STARNAV-EDSMU connection)
- 32
- 33 43. If MCC confirms STARNAV-EDSMU connection:
 - 34 Type "**slay download_image**" and press Enter
 - 35 Go to step 47
- 36 If no Starnav-EDSMU connection:
 - 37 Wait for 1 minute
 - 38 If PGSC displays error messages "Network Failure: Connection not established...", press Enter for new prompt and continue
- 39
- 40
- 41 44. Type "**slay download_image**" and press Enter
- 42
- 43 45. Type "**netstat -i**" and press Enter
- 44
- 45 46. Type "**ps**" and press Enter
- 46
- 47 47. Type "**./Snav 1 &**" and press Enter
- 48
- 49 **NOTE**
- 50 Program will finish when there is no more output
- 51 occurring on the screen
- 52
- 53 48. Wait for program to finish
- 54 Press Enter to get command prompt
- 55
- 56 49. Type "**cat code.log**" and press Enter
- 57

MSG 182 - BLUE FD13 STARNAV DEBUG IFM

1 Shared PGSC 50. Type “**ls -l images/**” and press Enter

2

3

51. Type “**df /**” press Enter

4

5

NOTE

Upon completion of next step, system will start shutting down and the telnet connection will be inactive or lost

7

8

52. Type “**shutdown**” and press Enter

9

SHARED PGSC DEACTIVATION

10

11

53. At telnet session, select ‘Connect’/‘Exit’

12

13

54. Double-click ‘My Computer’

14

15

Double-click ‘C:’

16

17

Double-click ‘temp’ folder

18

19

Double-click ‘3½ Floppy (A:)’

20

Drag <starnav.log> from ‘temp’ folder to A:drive (overwriting any old

21

<starnav.log> files)

22

√‘<starnav.log>’ file appears on A:drive

23

55. Close ‘3½ Floppy (A:)’ window

24

Close ‘temp’ window

25

Close ‘My Computer’ window

26

Remove Floppy Disk from PGSC

27

56. Select ‘Start’ / ‘Shut Down’

28

29

Shut Down Windows

30

57. Select ‘Shut down’

31

Select ‘OK’

32

√PGSC power – off

33

34

35 DC Adapt 58. DC PWR SPLY SW1 sw – OFF (It off)

36

37 Shared PGSC 59. Remove, temp stow PCMCIA Ethernet Card from Shared PGSC with
Ethernet Cable (SDZ39129269–301) and Aft Patch Panel Cable
(9064029–513) attached

38

39

40

60. Temp stow Shared PGSC

41

42

61. Transfer Floppy Disk to Flightdeck for OCA download via Proshare Machine

43

44

45 FD(Proshare) 62. Remove OCA Floppy Disk from Proshare Machine

46

Insert ZCG Floppy Disk into A:drive

47

Using Explorer, click on ‘C:\OCA-DOWN\PAYLOADS’ under ‘All Folders’ box

48

Drag <starnav.log> from A:drive to C:\OCA-DOWN\PAYLOADS’ folder

49

(overwriting any old <starnav.log> files)

50

Remove ZCG Floppy Disk

51

Re-insert OCA Floppy Disk

52

53

54

55

MSG 182 - BLUE FD13 STARNAV DEBUG IFM

1	SC04A	63.	Stow ZCG Floppy Disk in ZCG-1 STOWAGE
2			
3		64.	Disconnect Aft Patch Panel Cable (9064029–513) connector TO AFT
4	Aft Overhead		PATCH PANEL J10 from Aft Patch Panel J10
5			Release Velcro Ties to remove Aft Patch Panel Cable from routed position
6			
7	AC17	65.	Stow PCMCIA Ethernet Card/Ethernet Cable connected to Aft Patch Panel
8			Cable
9			
10		66.	Notify MCC (STARNAV DEBUG IFM complete)
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			
51			